




## AM / FM HEADPHONE RADIO

Model: VX3610

### OPERATING INSTRUCTIONS

**Before operating this product, read, understand, and follow these instructions. Be sure to save these instructions for future reference.**

- Do not use the radio for any purpose other than its intended use.
- This product is not intended for use by children.
- Never operate this product if it is not working properly, has been dropped, damaged, or exposed to water or other liquids. This unit has no user-serviceable parts. Only qualified service personnel should perform any servicing. Do not attempt to examine or repair this product yourself. Return the product to a service center for examination and repair.
- Do not place or store product near water or other liquids. Do not store or expose this radio to direct sunlight or very hot or cold temperatures.
- Do not expose batteries to fire or other heat sources. Follow the battery manufacturer's safety and usage instructions.

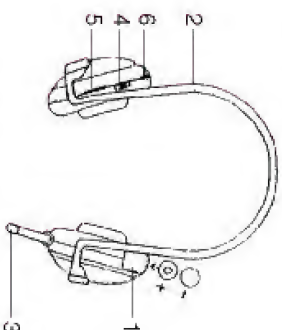

1. Battery Door
2. Neck Band
3. FM Antenna\*
4. AM/FM Band Switch
5. Tuning Knob
6. Power Switch / Volume Control Knob

\*The radio has a built-in AM antenna.

**NOTE:** Remove the batteries from the radio if they are exhausted or when storing the radio for an extended period of time. When replacing the batteries, use new batteries of the same size. Do not mix a used battery with a new battery, or mix different chemistries or sizes of batteries. Never throw batteries into a fire. Do not expose batteries to fire or other heat sources. Follow the battery manufacturer's safety and usage instructions.

1. Remove the Battery Door from the headphones and insert two (2) "AAA" size alkaline batteries (not included). Be sure to align the battery polarity (+/-) as indicated on top of the Battery Door.
2. Replace the Battery Door onto the headphones and ensure it is securely in place.
3. **NOTE:** Remove the batteries when the radio is not in use to prevent damage to the radio due to rusted or corroded batteries.

### Radio Operation:

1. Rotate the Power Switch / Volume Control Knob clockwise until power is applied to the radio and the desired volume level is reached.
2. Select either AM or FM on the AM/FM Band Switch as desired.
3. To tune the radio, rotate the Tuning Knob until the desired frequency is reached.
4. To turn the radio off, rotate the Power Switch / Volume Control Knob counterclockwise until the switch is in the "OFF" position.

### FCC Requirements

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communication Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by applying and removing power to the equipment, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit separated from the circuit to which the receiver is connected.
- Consult a dealer or an experienced radio/television technician for assistance.

SPECIFICATIONS	
Power Source	2 x 1.5V "AAA" size batteries (not included)
Frequency Range	FM: 88 – 108 MHz AM: 530 – 1700KHz

" FOR ADDITIONAL SET UP OR OPERATING ASSISTANCE, PLEASE CONTACT CUSTOMER SERVICE AT (954) 660-7100. PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO PLACE OR PURCHASE. FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-321-6993"

Made in China